

1 Comp. Loc. ABS

1.1 ABS overview

- 1 - Right rear ABS wheel speed sensor -G44-
- 2 - Left rear ABS wheel speed sensor -G46-
- 3 - Sensor electronics control module -J849
- 4 - Brake lamp switch F
- 6 - Diagnostic connection
- 7 - Left front ABS wheel speed sensor -G47-
- 8 - ABS hydraulic unit -N55-
- 8 - ABS control module -J104
- 9 - Steering angle sensor -G85-
- 10 - Return Ring
- 11 - Right front ABS wheel speed sensor -G45-
- 12 - -AUTO HOLD- button -E540-
- 13 - Parking brake contact switch -F321-

